

Sprint Trigger Frame

General maintenance

- (1) Use the compressed air to clean the coil set (part No. #JE18A) to keep it's best performance after every use.
- (2) Beside (1). cleaning should only be performed on the exterior of the Sprint frame. Never submerge the Sprint frame in any type of liquid for any reason. The electronics may become damaged or destroyed. Keep water or cleaning solution from entering the inside of the Sprint frame. Solvents should not be used to clean any part of the Sprint frame.
- (3) Always use the appropriate tool to remove screws and other components of the Sprint frame.
- (4) **Do not dry fire.**
- (5) **There is a self-monitoring devise that helps to prevent the electronics from becoming damaged during periods of abnormal use. This devise will act as a regulated shut-off switch and will disengage after a slight resting period.**

Tournament Mode Setting

There are two simple ways for tournament mode setting

- (1) Just set the dipswitches No.5,6 at 1,1 position the marker will become semi-auto (one single shot with reactive trigger response function) only, dipswitches 1,2,3,4, may be at any position.
- (2) To disable the 3-round burst, 6-round burst, and full-auto functions, gently pull out the lock switch (part #JE30B). Putting the lock switch back into the grips will enable the multi-mode functions.